



**OPTIMISES ROOT ZONE DRAINAGE WITH AUTOPOT WATERING SYSTEMS**

**REMOVES THE NEED FOR A PEBBLE LAYER IN THE BASE OF YOUR POT**

**DESIGNED FOR EASY OPTIONAL INTEGRATION WITH AIRDOME**



*Applicable to UK / RoW excl. USA and Canada*



*AirBase Square fits AutoPot 8.5L and 15L plastic pots as used in 1Pot modules (pictured) and easy2grow modules*



*AirBase Round fits AutoPot 25L plastic and 20L fabric pots as used in XL and XL FlexiPot modules*



**AIRBASE SQUARE**



**AIRBASE ROUND**



 @AUTOPOT\_GLOBAL

 @AUTOPOTSYSTEMS



 AUTOPOT.CO.UK

 @AUTOPOTUK



**PRODUCED FROM TOUGH ABS PLASTIC - EXTENSIVELY REUSABLE**

**REMOVEABLE CENTRE SECTION ACCOMMODATES AIRDOME**

**AIRDOME AERATES ROOT ZONE - FOR SUPERCHARGED GROWTH**

**AIRBASE SQUARE FOR:** AutoPot 8.5L & 15L plastic pots

**AS USED IN:**



**AIRBASE ROUND FOR:** AutoPot 25L plastic & 20 L fabric pots

**AS USED IN:**



## SETUP GUIDE

Follow directions below for AirBase Square and AirBase Round



**1**

Prepare your pots with root control as usual. Refer to your system instructions for relevant guidance.

If using AirBase **without** AirDome go to **Step 2**

If using AirBase **with** AirDome go to **Step 3**




**2**

**If using without AirDome**

Place AirBase into the base of your pot.

**Go to Step 5**

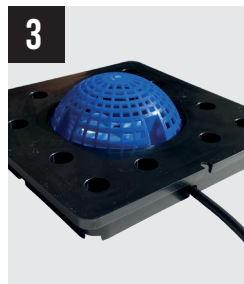

**3**

**If using with AirDome**

Remove AirBase centrepiece.

Place AirBase over your assembled AirDome

Ensure air pipe is fitted into notch on underside of AirBase.




**4**

**If using with AirDome**

Lower the AirDome and AirBase into pot. Ensure air pipe is fitted into the notch on the side of the AirBase.

Your air pipe routes up over the pot edge to your air pump.

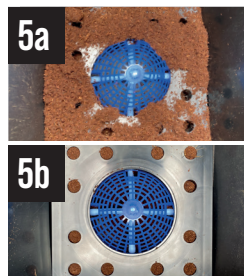

**5a**

**All configurations**

Pour a small amount of grow media into the pot (5a).



**5b**

Ensure there is media down in the holes in the Base (5b) - **this is essential for capillary action to occur.**



**6**

**All configurations**

Fill pots with medium and pot up plants. Water through pots and allow to drain outside the tray.

Once drained place pots into your module trays.